

Periodic Maintenance & Lubrication Chart



Sr. No.	Activities / Check points	Recommended frequency - Service interval & Kms							
		Servicing	1st	2nd	3rd	4th	5th	6th	7th
			(Free)	(Free)	(Free)				
		KMS	500 750	4500 5000	9500 10000	14500 15000	19500 20000	24500 25000	29500 30000
1.	Servicing with water wash	✓	✓	✓	✓	✓	✓	✓	✓
2.	Engine oil (Bajaj DTSI 10000 oil)	Top-up, R	R	Top-up	R	Top-up	R	Top-up	R
3.	Engine oil Filter	R	R		R		R		R
4.	Oil strainer	CL	CL		CL		CL		CL
5.	Air cleaner element** & air filter cover 'O' ring. Drain tube cleaning.	CL	CL	CL	CL	R	CL	CL	R
6.	Fuel cock sediment bowl cleaning**	CL				CL			CL
7.	Fuel pipes for cracks.	C, R	C	C	C	R	C	C	R
8.	Spark plug clean & check gap	CL, A, R			CL, A		CL, A		R
9.	Valve tappet clearance	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A
10.	Carburettor float chamber cleaning**	CL				CL			CL
11.	Carburettor rubber duct (Sleeve) for hard resulting in loose filament.	C, R				C, R	C, R	C, R	C, R
12.	Engine breather tube for cracks.	C, R				C, R	C, R	C, R	C, R
13.	EVAP system Hoses- check for cracks	C, R	C, R	C, R	C, R	C, R	C, R	C, R	C, R

Sr. No.	Activities / Check points	Recommended frequency - Service interval & Kms							
		Servicing	1st (Free)	2nd (Free)	3rd (Free)	4th	5th	6th	7th
		KMS	500 750	4500 5000	9500 10000	14500 15000	19500 20000	24500 25000	29500 30000
30.	Brake shoes (Front* / Rear*) and brake pad (Front) for wear limit. (*Drum brake)	C,R	C,R	C,R	C,R	R	C,R	C,R	R
31.	Brake cam Front* / Rear* (*Drum brake)	CL,L		CL,L	CL,L	CL,L	CL,L	CL,L	CL,L
32.	1. Check source of leakages if any in the brake system, 2. Check Front brake hose condition, 3. Check Brake fluid level and top up, if needed.	C,A,R	C,A,R	C,A,R	C,A,R	C,A,R	C,A,R	C,A,R	R
33.	Rear sprocket fasteners for looseness.	C,T	C,T		C,T		C,T		C,T
34.	Rear wheel rubber shock dampers for excess play.	C,R			C,R		C,R		C,R
35.	Fairing & windshield well nuts for rubber cracks	C,R			C,R		C,R		C,R
36.	All cables free play adjustment	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A
37.	Head light focus adjustment	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A
38.	Check & confirm all bulbs / switches working.	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A
39.	General lubrication – Clutch lever / front brake lever & kick lever,	L	L	L	L	L	L	L	L
40.	Tyre air pressure.	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A
41.	Mirror position & joint firmness.	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A

Periodic Maintenance & Lubrication Chart



Sr. No.	Activities / Check points	Recommended frequency - Service interval & Kms							
		Servicing	1st	2nd	3rd	4th	5th	6th	7th
			(Free)	(Free)	(Free)				
41.	All fasteners tightness, few are, Front & rear axle, Swing arm axle, Engine foundation, Rider foot rest, Pillion stay	KMS	500 750	4500 5000	9500 10000	14500 15000	19500 20000	24500 25000	29500 30000
		C, T	C, T	C, T	C, T	C, T	C, T	C, T	C, T

*** More frequent cleaning may be required while driving in dusty environment.

C : Check, A : Adjust, CL : Clean, R : Replace, T : Tighten, L : Lubricate

Note : Periodic parts, Oil, Filters, All types of greases, Clearing agents, Cables, Wear & tear parts, Rubber 'O' rings / oil seals / pipes, Gaskets to be replaced as per Periodic Maintenance and Lubrication Chart are mandatory and the same are chargeable to customer.

Intake valve Clearance - 0.05 mm

Exhaust valve Clearance - 0.10 mm

Head Bolt Torque - 23 Nm

8mm Nut Engine Nuts Torque - 10 Nm

Drain Bolt Torque - 10 Nm

Front Axle Nut Torque - 49 Nm

Rear Axle Nut Torque - 59 Nm